


TRADE HUB

House-418, Road-06, DOHS, Mirpur, Dhaka-1216.

Tel: +8802 8081060

Mobile : +8801716550908, +8801616550908

GPS Vehicle Tracker JV200 User Manual

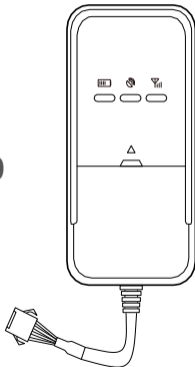

Thanks for purchasing this Jimi JV200. This device will provide you high quality GPS tracking service based on Jimi's exceptional technology and standards. This user manual has been specially designed to guide you through the functions and features of your JV200.

Please read this manual carefully before using your device to ensure safe and correct use.

The descriptions of this manual are based on the default setting of JV200.

Tips

Choose a rate plan wisely: Your JV200 can use up Internet bandwidth really quickly. Before you use your JV200, we strongly recommend that you talk to your mobile operator about data rates. If you're on a standard data plan, the costs could really add up. Switching to a flat-rate plan could be a lot cheaper.

Popular Uses:

Fleet Management - Track your fleet easily. View up to 15,000 units from a single map.

Investigators and Law Enforcement - Get the real-time location evidence you need.

Vehicle Owners - Use for vehicle theft and recovery efforts.

Features and Benefits:

No Battery Life Concerns - The unit is hardwired to your vehicle's battery.

10 Second Location Updates - The FASTEST location updates.

Web-Based Tracking - No software to install, view location data from any web browser.

Track Up to 15,000 Devices on a Single Account - Perfect for fleet management.

Extremely Accurate - Utilizes GPS and GSM Cell Towers for super accurate location data.

Detailed Reporting - View, Save, and Print detailed driving data - up to 90 days history.

Introducing your JV200


Learn about your device's layout, indications and specifications.

1. inside the Box

Check your product box for the following items:

- Device
- Charging Cable
- User Manual

2. JV200 Overview

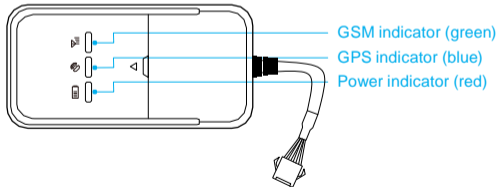

LED Indicators

Power indicator (red)	Indication
Flashing	Power on
Solid red	Not working properly
OFF	Power off
GPS indicator (blue)	Indication
Quick Flashing (0.1s on, 0.1s off)	Searching GPS signal
Solid blue	GPS fixed
OFF	No GPS fixed or initializing
GSM indicator (green)	Indication
Quick flashing (0.1s on, 0.1s off)	GSM initializing
Flashing (0.1s on, 2s off)	GSM signal received
Solid green	Connected to GPRS network
OFF	No GSM signal

LED indicators have two modes:

1. Hidden Mode: All indicators would turn off automatically by pressing LED controller.
2. Continuously Bright Mode: Indicators would never turn off if the device is working.

3. Specifications


Dimension	86.6(L) x 44(W) x 13.6(H) mm
Weight	50.5g
Operation Temperature	-20°C · 70°C
Operation Voltage	9-36vDC
Humidity	20% · 80%
GSM Frequencies	850/900/1800/1900 MHz
GPRS	Class 12
GPS Sensitivity	-159dBm
Acquisition Sensitivity	-144dBm
Position Accuracy	10m
TTFF (Open Sky)	Cold Start: < 38s
	GSM/GPS Antenna
	LED Indicator
GSM/GPS Antenna	Built-in design
LED Indicator	GSM-green, GPS-blue, Power-red
Data Transmit	TCP, SMS
Non-movement Detection	Movement alarm based on built-in 3D motion sensor
Mileage Report	Track by time/distance interval

4. Getting Started

Get started by assembling and setting up your device for its first use.

To remove the back cover:

- Firmly hold the device with both hands and the front panel facing down.
- Push the back cover up with your thumbs until it disengages from the device and then slide it up to remove.

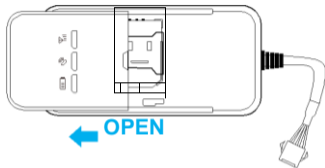



4.1 Install SIM card

1. To install the SIM card:

- Locate the SIM card slot, and then insert the SIM card with its gold

corner facing out the card slot.

- Slide the SIM card completely into the slot.
- After SIM card installed, please switch the power on.

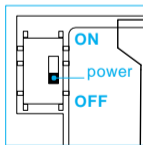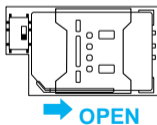


 Make sure there is enough credit on the SIM card. If you will be using the GPRS function, you should pay attention to the current SIM card GPRS charge.

4.2 Charge the device (Covert installation)


Plug the device connector into a charging cable.

 The charging cable with 2A FUSE for short-circuit over current protection.

 Improperly connecting the charging cable can cause serious damage to the device. Any damages by misuse are not covered by the warranty.

4.3 Install the device

You need to choose somewhere that it won't be found, because the whole point of fitting covert GPS vehicle tracker is the secrecy element.


 1. Your device has built-in GSM antenna and GPS antenna. During installation, please make sure the receiving side face is up ; any high power devices such as reversing radar, anti-theft device or communication equipment would affect the signal of the device.

- ⚠️ 2. All metallic cases of the windshield will attenuate the signal on the tracking device. It's simply due to the shielding effects of the metal compound of the case.
- ⚠️ 3. The device should be fixed into position with cable ties or wide double-side tape.

Installation please refers to below picture.

Under rear windshield


Under front windshield

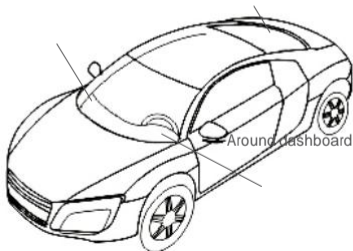

- Under the dash board below the front windshield;
- In the parcel shelf in the rear;
- In the front bumper (non-material face), make sure the device does not get wet;
- Under the wiper version (non-metal), make sure the device does not get wet;
- Non Covert Installation - fix the device on the dash board below windshield.

⚠ Device Wiring


- 1 The standard voltage is 9V-36V, the red wire is the positive, the black wire is the negative.
2. Connect the black wire to ground.
3. Wiring diagram

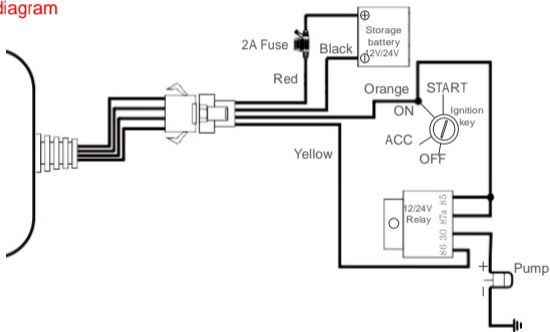

4.5 Power/ACC/Tele-cut off(petrol/electricity) control cable (4 pin)

1. Device standard power supply 9V-36V DC, please use the original factory supply power cord, red is positive, black is negative. During installation, power negative please should be independently grounded, do not connect with other ground wire.
2. The ACC line (orange) connects to ACC switch of the vehicle. Please make sure to connect the ACC wire; otherwise the device will enter ignition detection status when disconnect the ACC line. If you don't need to anti-theft temporarily, just connect the ACC line to the positive side in parallel.
3. Tele-cutoff (petrol/electricity) control line(yellow) is connected to pin 86 of the Tele-cutoff (petrol/electricity) relay (equal to the yellow line of the relay socket).

5. Quick Operation Instructions

-  To properly use the device, common parameters should be set before initial use. This can be done by using the parameter editor or by sending SMS commands to the device. **(", should be English comma and no space before and after the comma)**

5.1 Add SOS number

SMS command to the device to add the SOS number.

SOS,A,No.1,No.2,No.3#

"A" means to add new numbers, for example:

SOS,A,01716550908,01616550908,01916550908#

It will reply

"OK!"

SOS1:01716550908 SOS2:01616550908 SOS3:01916550908"

after set successfully.

5.2 APN setting

To connect default platform www.jimishare.com, please send the SMS command below,APN command format:

APN,APN name# or APN,APN name,user name,password#

Example:

APN,gpinternet# or **APN,blweb#** or **APN,internet#**

An automatic reply OK will be sent in one minute if setup is successful.

5.3 Server setting

To connect other platform, please send the SMS commands below:

Command format:

```
SERVER,1,domain,Port,0#
```

Example:

```
SERVER,1,www.jimilab.com,8841,0#
```

It will reply "OK" after set successfully.

5.4 Set the center number

If you want to cut off/restore oil by SMS command, you have to set a center number firstly. Only the center number can send the cut off/restore oil command to the device. You can set your own mobile number as center number.


The command for setting center number is:

```
CENTER,A,mobile number#
```

For example:

```
CENTER,A,01716559908#
```

If set successfully, there is an "OK" reply message.

 Only the SOS number can be used to add or delete center number successfully. There is only one center number can be set.

5.5 GPRS time interval

Users can modify GPRS time sending interval by SMS

TIMER,T1,T2#

T1 ranges 5~18000 or 0(seconds), upload interval when ACC ON, 0 means no upload, default is 10;

T2 ranges 5~18000 or 0(seconds), upload interval when ACC OFF, 0 means no upload, default is 10;

5.6 Vibration alarm delay time setting

Delay time for device entering vibration alarm state after the vehicle power is off and ACC is in low-level. In the vibration alarm state, if the vehicle vibrates for a few times, it will activate the vibration alarm system. If the vehicle battery is still not on (ACC is in low level) after 3 minutes, the device will start vibration alarm. SMS format:

DEFENSE,TIME#

The time ranges from 1 to 60 minutes, default is 10.

1. Preset SOS numbers before sending SMS alarm messages and calls.
2. If there is no need for vibration alarm, please SMS **SENALM,OFF#** to close it.

5.7 Check parameter setting

You can check the parameter setting by command:

PARAM#

Example: PARAM#

Information replied:

IMEI: 353419032348877 ---IMEI number of the device;

TIMER: 10,10; -GPS data uploading Interval; SENDS:5;

the GPS working time when ACC is OFF;

SOS: 01716550908,,;- SOS numbers, maximum 3 SOS numbers can be set and used for alarm and monitoring;

Center Number: 01716550908;-only 1 center number can be set and used for cutting off /restoring oil command;

Sensoralm: 10,5,1,180; --- detect 5 vibrations in 10s; the alarm delay is 180s;

Defense time: 10; --- the vibration alarm delay is 10 minutes; TimeZone:E,8,0; --- time zone info.

The replied information contains IMEI number, GPS data uploading Interval, GPS working time, SOS number, center number, sensor time interval, vibration alarm delay and time zone info.

PARAM#

IMEI:862304021708655; TIMER:10,10; SENDS:5; SOS:01711526353,01777752225,; Center Number:

01711526353; Sensorset:10,1,5,1; Defense time:1; TimeZone:E,6,0;

5.8 Check GPRS parameters

SMS command format

GPRSSET# Example:GPRSSET# Reply message:

GPRS:ON //GPRS on/off status//

Currently use APN:CMNET,user,password; //APN setting information//

Server:1,www.gpsluckly.com,88,0; //platform information//

URL:http://maps.google.com/maps?q=; //preset web link setting information //

GPRSSET#

GPRS:ON; Currently use APN:gpinternet,,; Server:1,JV200.jimishare.com,8241,0;

URL:http://maps.google.com/maps?q=;

6. Operation of device

6.1 Power on/ Power off

Power on: Once insert a valid SIM card and connect all the wires, turn on the device, then Power LED will flash first, during signal searching process, GSM and GPS LED will flash. Once GPS LED keeps slow flashing, it means the device has been located and it starts to work.

Power off: Just turn off the power switch.

The device will begin to upload positioning data to server once inserting a valid SIM card and power on. During the working time, it can upload data to server every 10 seconds.

 To power on / power off, please remove the back cover first, refer to 4. Getting Started.

6.2 Check location

1. Via SMS

1.1 SMS "**WHERE#**" to the SIM number of device. The device will send a location message automatically. You can get the coordinates. If the device does not search any information of location, it will send "No data" to the cell phone.

Example:

Current position!

Lat:N22.577156,Lon:E113.916748,Course:131.99,Speed:0.00Km/h,Date
Time:2013-10-08 17:35:32

1.2 SMS "**URL#**" to the SIM number of device. The device will send a location Google Map link. If the device does not search any information of location, it will send "No data" to the cell phone.

Example:

<10-08 17:36><http://maps.google.com/maps?q=N22.577156,E113.916748>

2. Via platform

Go to the platform website offered by dealers to check your vehicle location.

6.3 Wire cut-off alarm

When the electricity supply of device is cut off, it will activate cut-off alarm. In

this case, the device will send related SMS to the specific numbers and dial the numbers in circles. If nobody answers, the call just keeps 3 loops at most. At the meantime, the device will upload SOS alarm data to the server. And it will send: Cut Power! <Date Time:13-06-17 14:53:06>, <http://maps.google.com/maps?q=N22576713,E113.916585>

 The specific numbers should be preset, please refer to 5.1

6.4 Low battery alarm

When the device is only working with battery, once the internal voltage of battery is less than 3.7V, device will send low battery alarm SMS to specific number and alarm on platform.

Low battery alarm SMS content example: "Attention!!! Battery is too low, please charge." Which means the battery is too low, inform user charging it in time.

 The specific numbers should be preset, please refer to 5.1.

6.5 Vibration alarm

The vibration alarm function is off by default. To activate this function, please send the following command:

SENALM,ON#

The alarm will be sent to both the service platform and SOS numbers.

When vehicle power is off, ACC status is low, and if the lead time of low ACC is more than 10 minutes (settable), device will activate security alarm. When the security alarm is on, once the vehicle vibrates for several times, the alarm will be activated; in the next 3 minutes, if vehicle power is still off (ACC status is low), device will start alarm. At this time, it will send alarm message to the service platform with the latitude and longitude, while the platform will reply the Chinese address. Then the terminal will send vibration alarm message to SOS numbers with the Chinese address, and call the SOS numbers in cycle. If nobody answers, it will stop calling after 3 loops. If the Chinese address can not be acquired for certain reason, the terminal will send a message with the website link to the SOS numbers.

Example:

Sensor Alarm (<11-23 14:53>, <http://maps.google.com/maps?q=N22576713,E113.916585>)

1. The SOS numbers should be preset.
2. Send "SENALM, OFF#" to turn off the vibration alarm if don't need.

6.6 Oil cut-off

1. via platform

Send oil cut-off command on platform. To make sure the security of vehicle, tracker can only indicate to cut off oil when GPS is in valid position status, and the speed is less than 20KM/H or in static. Platform account password is needed when sending oil cut off command.


2. Via SMS

Firstly, you should set a center number. Please refer to 5.4.

Only center number can send the command to the device to cut off and restore oil.

The format is: **RELAY,1#**

After the command is carried out, it will reply "Cut off the fuel supply: Success! Speed:0 Km/h". If the command didn't carry out, it will reply the reason about fail to carry out.

 To ensure the safety of the driver and the car, this command is valid only under two conditions: the GPS is located; the speed is less than 20km/h

6.7 Restoring Oil

1. Via platform

When the alarm is off, sending recover oil commands manually. Device will restore oil supplying, and vehicle will work normally again.

Platform account password is needed when sending oil cut off command.

2. Via SMS

Only center number can send the command to the device to restore oil.

The format is: **RELAY,0#**

After the command is carried out, it will receive "Restore fuel supply: Success!"

6.8 Over Speed Alarm

When the car is moving over a limited speed in average in a limited time period, then the device will send over speed alarm SMS to user.

To turn on the over speed function, please send below SMS command:

SPEED,ON,Time,Limited speed,way of alarm#

Time range(Second): 5-600s (default as 20s).

Limited speed range(km/h): 1-255, default:120.

Way of alarm: 0, GPRS only; 1, SMS+GPRS; default:1.

Example: **SPEED,ON,10,120,1#**

Means when the car is moving over 120km/h in average in 10 seconds, the device will send over speed alarm to user.

6.9 Restore to factory setting

SMS command format: "FACTORY#" to set all parameter to default factory value. Once received "OK", it succeeds.

6.10 Reboot device

When there is something wrong with the link of GPRS, e.g., the parameter setting of the device is correct, but you can't track the car on the platform. At this moment you can send a command to the device to reboot the device.

The format is: RESET#

After receiving this command, the device will reboot after 1mins.

7. Register and log onto GPS tracking platform: www.jimishare.com

Account: IMEI Number

The function on the GPS platform can be realized as follows:

- Real-time Tracking
- Report and Statistics
- Online Configuration

8. Troubleshooting

If you are having trouble with your device, try these troubleshooting procedures

Before contacting a service professional.

Problems	Causes	Solutions
Red LED does not work when power connected	The fuse blows	Replace the fuse
Fail to connect network	Wrong installation of SIM card	Check SIM card installation (►4.1 Install SIM card)
	Filth on the SIM card iron surface.	Clean it
	Useless SIM	Contact internet service provider
	Improper installation	Check installation of device (►4.3 Install the device)
	Beyond GSM service area	Use it in effective GSM service offer area
	Bad signal	Try again in a better signal area
Fail to charge	The voltage is unsuitable	Connect with power with suitable voltage
	Improper connection	Check connection with charger

Safety Precautions

Handle and dispose of batteries and chargers with care

Use only Trade Hub approved accessories specially designed for your device. Incompatible accessories can cause serious injuries or damage to your device. Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explore when overheated. Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.



Correct disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking in the battery, manual or packaging indicates that batteries on this product should not be disposed of with other household waste at the end of their working life. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect the natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.